Hitmate

START

Hold the Plugin by the edges so that you are not touching the pins or screw heads.

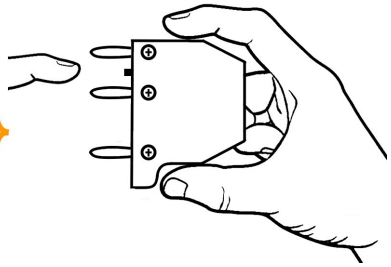

Briefly press the switch located between the pins with your finger.

Immediately remove your finger so that it is not touching the pins.

Does the buzzer sound and green LED flash?
- No → Does the buzzer sound and red LED flash?
  - No → The battery is empty. → 2 → Refer to the CWES2 Battery Charging Instructions
  - Yes → The battery is running low and has less than 20 minutes use remaining. → 1
- Yes → Wait until the LEDs turn off and insert the Plugin into the epee within five seconds.

Does the buzzer sound and red or green LED flash?
- No → Your epee has not been detected or the Plugin has switched off. → 3 → Remove the Plugin from the epee.
- Yes → Hit your foot.

Does only the buzzer sound?
- No → There is problem with your epee or Plugin. → 4 → Refer to the CWES2 Troubleshooting Guide
- Yes → Hit your opponents guard.

Have you tried three times?
- No → Remove the Plugin from the epee. → Does the buzzer sound and red LED flash?
- Yes → Have you tried three times?
  - No → Remove the Plugin from the epee. → Does the buzzer sound and red LED flash?
  - Yes → There is problem with your epee or Plugin. → 4 → Refer to the CWES2 Troubleshooting Guide

Does the buzzer sound and red LED flash?
- No → Does the buzzer sound and green LED flash?
  - No → Remove the Plugin from the epee.
  - Yes → You are the green fencer.
- Yes → You are the red fencer.

If you have a Repeater, turn it on by pressing the green button

All checks have passed. You are ready to start fencing.

Scan or Click to open the downloads folder

CWES2 Quick Start Guide
V1.2 05/03/25